

**CHAPTER 30  
ELEVATORS AND CONVEYING SYSTEMS**

**3001.4 Change in use.** A change in use of an elevator from freight to passenger, passenger to freight, or from one freight class to another freight class shall comply with Section 8.7 Part XII of ASME A17.1. (*posted 12-17-07*)

**3006.5 Shunt trip.** Where elevator hoistways or elevator machine rooms containing elevator control equipment are protected with automatic sprinklers, a means installed in accordance with NFPA 72, Section ~~3-9.4~~ 6.15.4, Elevator Shutdown, shall be provided to disconnect automatically the main line power supply to the affected elevator prior to the application of water. This means shall not be self-resetting. The activation of sprinklers outside the hoistway or machine room shall not disconnect the main line power supply. (*posted 12-17-07*)

**CHAPTER 30  
ELEVATORS AND CONVEYING SYSTEMS**

**3006.4 Machine rooms and machinery spaces.** Elevator machine rooms and machinery spaces shall be enclosed with fire barriers complying with Section 706 or horizontal assemblies complying with Section 711 ~~having with~~ a fire-resistance rating not less than the required rating of the hoistway enclosure served by the machinery. Openings shall be protected with assemblies having a fire-protection rating not less than that required for the hoistway enclosure doors. (*posted 7-1-06*)